



One Wood recommends that the wall-mounted bench is installed by a qualified installer to ensure correct installation, optimal functionality and the longest possible service life. It is also important that the wall has sufficient load-bearing capacity to support the product and the expected load.



Always use screws and wall plugs suitable for the type of wall

ASSEMBLY

1. Start by measuring the position of the two lower spacers. The spacers must be mounted so that their top edge is 120 mm above floor level.
2. Next, measure the position of the third spacer. This must be mounted with its top edge 1105 mm above floor level and must be aligned with one of the lower spacers.
3. Secure the three spacers to the wall using 4 screws and suitable wall plugs appropriate for the type of wall.
4. Place the bench on the spacers and secure it using 2 wood screws through the bench and into the spacers.

NOTE

After installation, check that the bench is securely fastened and that all screws are properly tightened before the product is put into use.

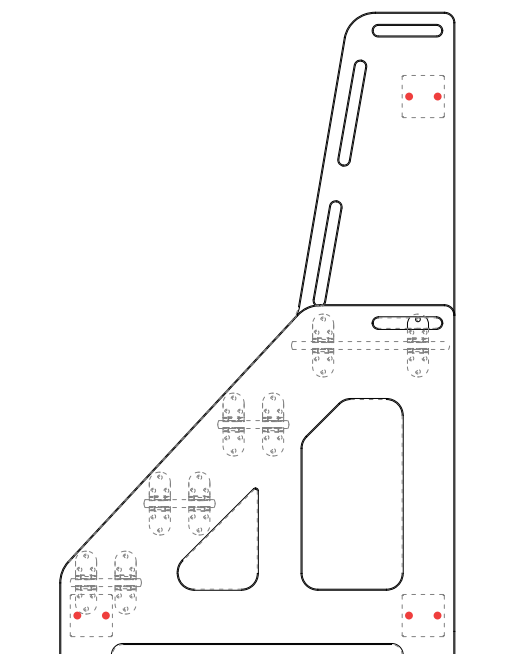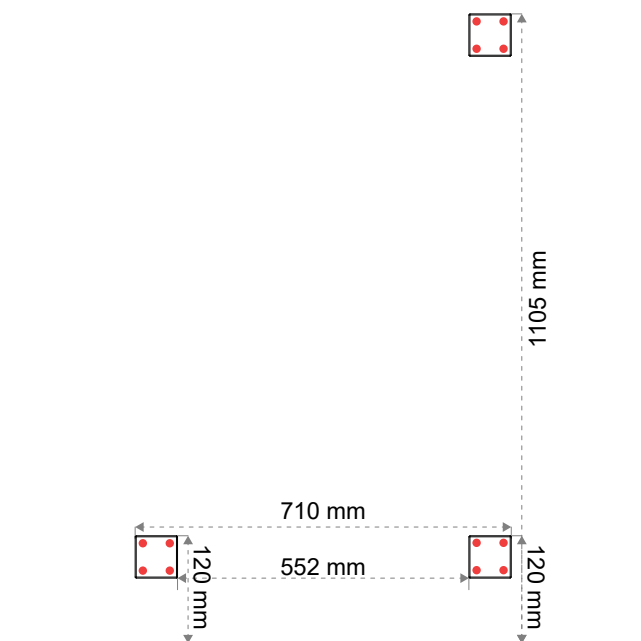



- MØBLER TIL INSTITUTIONER



onewood.dk



+45 62 27 19 30



Info@onewood.dk